



Switch Replacement Instructions

⚠ WARNING

To avoid electrical shock, disconnect power to unit before attempting to remove light and/or fan switch.

PROCEDURE:

The light and fan switches are mounted to the top mainframe.

To access and remove light and/or fan switches, the unit grille will need to be removed first. (See Figure 1).

- Step 1. Remove the switch enclosure directly behind the top mainframe extrusion by extracting the retaining screw. Then, tilt the back of the switch enclosure forward and lift up.
- Step 2. Disconnect the wires from the switch being removed.
- Step 3. Open the refrigerator or freezer door below the switch being removed.
- Step 4. Depress the tab on the side of the switch while pushing the switch down and out of the opening in the main-frame extrusion. (See Figure 1).

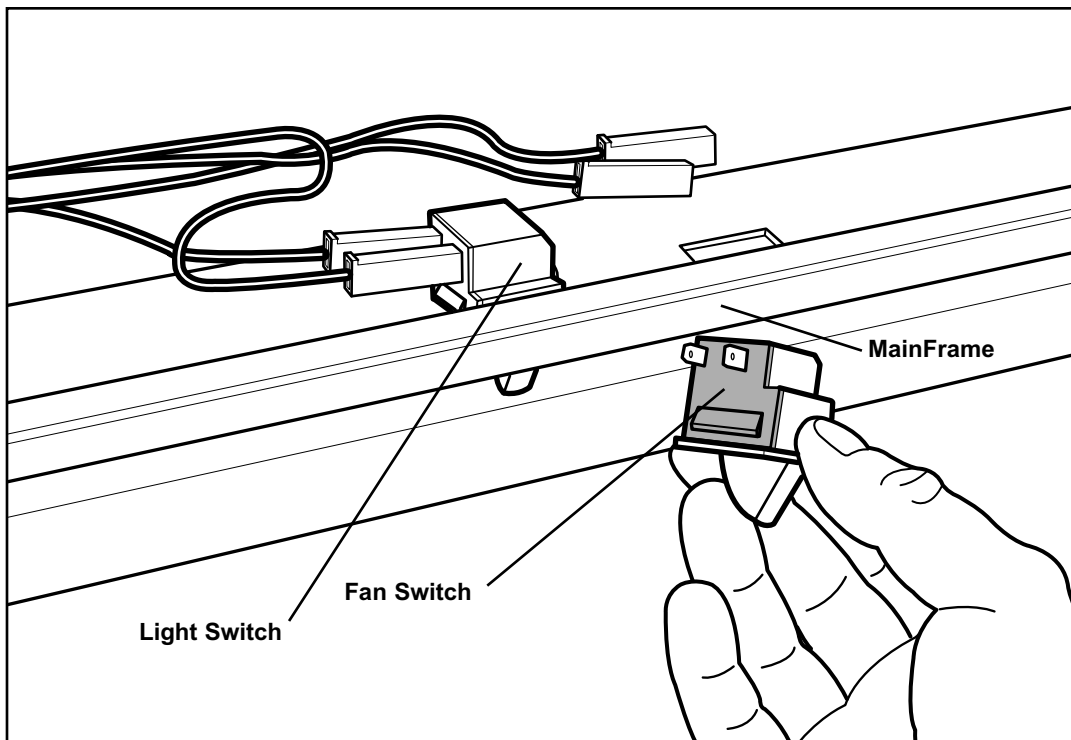


Figure 1