

CLASSIC (FORMERLY BUILT-IN) SERIES

- 1 Press the Power key to turn off the unit.
- 2 Press and hold either pair of Warmer and Colder keys, then the Power key. Release all three keys.
Note: "Sh r" and the setpoints will appear on the LCD display. The unit will not cool to the setpoints while in Showroom mode.
- 3 To return the unit to normal operation, repeat steps 1 and 2.
Note: "Sh r" will not appear when taking the unit out of Showroom mode.

DESIGNER (FORMERLY INTEGRATED) SERIES

- 1 Turn on the unit.
- 2 Touch the gear icon on the control panel. If temperatures appear, touch the arrow first.
- 3 Touch the wrench icon on the control panel.
- 4 Enter the Showroom mode password by touching the dashes until each symbol appears as pictured below.
 - For models starting with serial number 5536000:



- For models prior to serial number 5536000:




- 5 Touch Showroom Mode. It may be necessary to scroll or swipe to the Showroom Mode option.
- 6 Touch Start to initiate Showroom mode. Touch Stop to turn off Showroom mode.
Note: Unit will exit the functions menu after 20 seconds.


PRO

- 1 Touch and hold the Automatic Display Lock icon for 3 seconds.


- 2 Tap the Settings icon .

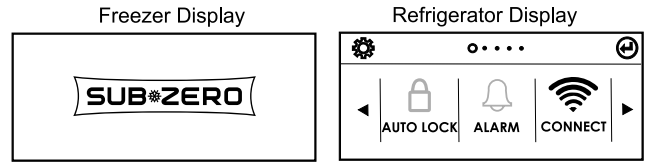


- 3 Tap the right arrow three times.

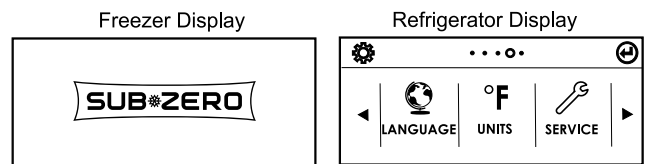


- 4 Tap the Service icon. The Service Password screen appears.

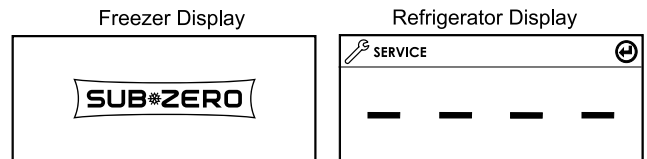


- 5 Tap each dash until it shows the symbol listed below. This is the password for Showroom mode.

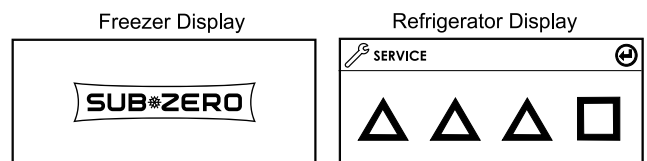

- 6 The Showroom screen shows the current Showroom status. Tap On or Off to change the Showroom mode status.

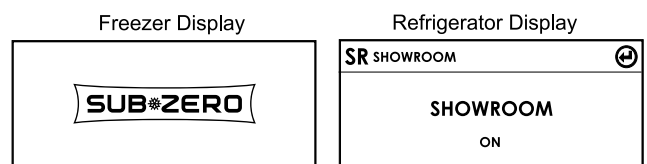

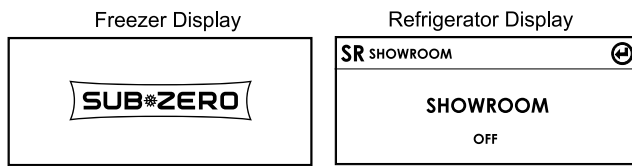


- 3 To return the unit to normal operation, repeat steps 1 and 2.

UNDERCOUNTER ICE MAKER

There is no Showroom mode on Undercounter Ice Maker units. When installing an Undercounter Ice Maker on a showroom floor, do not connect the unit to water or power.

- 7 Touch the Return icon or wait 3 seconds for the display to return to the Home screen.

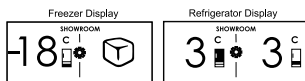

DESIGNER (FORMERLY INTEGRATED) WINE

- 1 Turn on the unit.
- 2 Touch the gear icon on the control panel. If temperatures appear, press the arrow first.
- 3 Touch the wrench icon.
- 4 Enter the Showroom mode password by touching the dashes until each symbol appears as pictured below.

Enter Password



- 5 Touch Showroom Mode. It may be necessary to scroll or swipe to see the words "Showroom Mode."
- 6 Press Start to turn on Showroom mode. Press Stop to turn off Showroom mode.

648PRO, UNDERCOUNTER REFRIGERATION, 400 SERIES, 700 SERIES, UW-24, BW-30

- 1 Turn off the unit using the Power or Unit On/Off key.
- 2 Press and hold either pair of Warmer and Colder keys, then the Power key. Release all three keys.

Note: UW-24, BW-30 only: Use upper zone warmer and colder keys to initiate Showroom mode.

Note: Ambient temperatures will appear in the LCD display.



SPEED OVEN

CONTENTS (PART #821106)	
1	Step-up transformer
1	Showroom power cord, 240 V

The kit is required to run Speed Ovens in Showroom mode (Demo mode). The lights and controls will work in Showroom mode. All other operation is disabled.

Enter Showroom Mode

- 1 Touch Settings five times.
- 2 Touch 1.
- 3 Touch Start. "DEMO ON" appears on the control panel display. "DEMO" remains on the display.

Exit Showroom Mode

- 1 Touch Settings five times.
- 2 Touch 6.
- 3 Touch Start. "DEMO OFF" appears on the control panel display.

CONVECTION STEAM OVEN (WITH TOUCH CONTROLS)

CONTENTS (PART #821106)	
1	Step-up transformer
1	Showroom power cord, 240 V

All current Convection Steam Oven models do not have a knob.

The kit is required to run Convection Steam Ovens in Showroom mode (Demo mode). The lights and controls will work in Showroom mode. All other operation is disabled.

Enter Showroom Mode

- 1 With the oven on, touch Settings.
- 2 Use the arrows to select Demo mode.
- 3 Touch Enter. "SWITCH DEMO MODE ON" appears on the display.
- 4 Touch Enter to choose the Demo mode icon. "ENTER PASSWORD" appears.
- 5 Use the arrows to go to each number and touch Enter to confirm each number.

Note: The password is 6301.

- 6 Use the arrows to go to the check mark icon and touch Enter to confirm. "DEMO MODE ON" appears on the display.

Note: When in Showroom mode, a check mark will appear over the Demo mode icon in the Settings menu to indicate it is active.

Exit Showroom Mode

- 1 With the oven on, press Settings.
- 2 Use the arrows to select Demo mode.
- 3 Touch Enter. "SWITCH DEMO MODE OFF" appears on the display.
- 4 Touch Enter to choose the Demo mode icon. "ENTER PASSWORD" appears.
- 5 Use the arrows to go to each number and touch Enter to confirm each number.
- 6 "DO YOU WANT TO RESTORE THE FACTORY SETTINGS?" appears on the display. Touch Enter to select No.

Note: The password is 6301.

Note: No indication that the Showroom mode has been canceled will appear on the display. To confirm, verify the check mark no longer appears above the Demo mode icon in the Settings menu.

CONVECTION STEAM OVEN (WITH KNOB)

CONTENTS (PART #821106)	
1	120 V to 240 V transformer

All earlier Convection Steam Oven models have a knob.

Enter Showroom Mode

- 1 Turn off the unit. The control panel should be dark.
- 2 Press and hold Light, OK, and Off simultaneously until <<Demo-Modus>><<off>> appears.
- 3 Turn the knob until <<Demo-Modus>><<on>> appears on the display.
- 4 Press OK to confirm the change in setting.
- 5 Press Off to exit settings.

Exit Showroom Mode

- 1 Press and hold Light, OK, and Off simultaneously until <<Demo-Modus>><<on>> appears.





Convection Steam Oven (with Knob) (continued)

- Turn the knob until <<Demo-Modus>><<off>> appears on the display.
- Press OK to confirm the change in setting.
- Press the Off button to exit settings.

- Turn the knob until the display reads <<Demo-Modus>><<on>>.
- Press OK to confirm the change in setting.
- Press Off to exit configuration mode.

E SERIES OVEN

CONTENTS (PART #810110)	
3	Nuts, red wire
1	120 V to 240 V transformer
1	Cord, showroom power 240 V
1	Instructions

Kit must be installed to operate the unit in Showroom mode.

Enter Showroom Mode

- Press and hold Set Timer for five seconds.
- Press 2 to enter Showroom mode.
- Press Enter to confirm.

Note: If power is interrupted to the unit, Showroom mode must be re-entered in units manufactured before 2011.

Exit Showroom Mode

- Press and hold Set Timer for five seconds.
- Press 2 to exit Showroom mode.
- Press Enter to confirm.

SO24TE

CONTENTS (PART #821106)	
1	120 V to 240 V transformer

Kit must be installed to operate the unit in Showroom mode.

Enter Showroom Mode

- Verify the unit is off and the control panel is dark.
- Press and hold Light, OK, and Off simultaneously until <<Demo-Modus>><<off>> appears.

Note: On SO24TES/TH models, a password prompt will appear. Use the knob to go to each number and press OK to confirm each number. The password is 6301.

Exit Showroom Mode

- Press and hold Light, OK, and Off simultaneously until <<Demo-Modus>><<on>> appears.

Note: On SO24TES/TH models, a password prompt will appear. Use the knob to go to each number and press OK to confirm each number. The password is 6301.
- Turn the knob until the display reads <<Demo-Modus>><<off>>.
- Press OK to confirm the change in setting.
- Press Off to exit configuration mode.

L SERIES OVEN

No kit needed. Connect directly to 120 V.

Enter Showroom Mode

- Splice L1 (black wire) and L2 (red wire) together and connect to L1 from the wall receptacle.
- Connect Neutral (white wire) to Neutral from the wall receptacle.
- Connect Ground (green wire) to Ground from the wall receptacle.
- Install the unit into a showroom on a 120 VAC designated circuit.

Exit Showroom Mode

Reverse the procedure and install the unit into 240 V.

M SERIES OVEN

CONTENTS (PART #824493)	
3	Nuts, red wire
2	25-watt, 120 V halogen lamps
4	40-watt, 120 V halogen lamps
1	Cord, showroom power 240 V
1	Instructions



M Series Oven (continued)

Enter Showroom Mode

- 1 Press Settings.
- 2 Select Showroom Mode.
- 3 Select Showroom Mode On or Off to enter or exit Showroom mode respectively.
Note: If connecting to 120 V, the unit will automatically detect 120 V and go into Showroom mode.
 - When installing the unit into 120 V, replace the oven lights with the 120 V lamps included in the M Series kit.
 - Once installed into 120 V, Showroom mode cannot be exited.

CE ELECTRIC COOKTOP/CI INDUCTION COOKTOP

No kit needed. Connect directly to 120 V connection.

Enter Showroom Mode

- 1 Make sure the cooktop is locked and the lock LED is lit. If it is not, touch and hold Lock for 3 seconds.
- 2 Press and hold Timer + and - for 5 seconds until the controls flash once and the cooktop enters diagnostic mode. Release the keys immediately after the controls flash, or the cooktop will exit diagnostic mode.
- 3 Press Timer + six times.
Note: The front control zone SIM and HI icons and seven back control zone LEDs will light up, indicating Showroom mode is available for selection.
- 4 Press HI to turn on Showroom mode.
Note: SH will appear in the timer display once Showroom mode turns on.
- 5 Touch All Off to enter diagnostic mode.

Exit Showroom Mode

- 1 Make sure the cooktop is locked and the lock LED is lit. If it is not, touch and hold Lock for three seconds.
- 2 Press and hold Timer + and - for 5 seconds until the controls flash once and the cooktop enters diagnostic mode. Release the keys immediately after the controls flash, or the cooktop will exit diagnostic mode.
- 3 Press Timer + six times.
Note: The front control zone SIM and HI icons and seven back control zone LEDs will light up, indicating Showroom mode is available for selection.

- 4 Press SIM to toggle Showroom mode off.
Note: SH will disappear from the timer display once Showroom mode has turned off.
- 5 Touch All Off to exit diagnostic mode.
Note: The cooktop will work as normal with no power supplied to the cooking zones. SH will appear in the timer display unless the timer is on. The unit will stay in Showroom mode, even if power is interrupted.

CT ELECTRIC COOKTOP

- 1 Make sure the cooktop is locked by touching and holding Lock for 3 seconds.
- 2 From Lock mode, press and hold Melt for the front element for 5 seconds.
- 3 The control will enter or exit Showroom mode.
Note: When exiting Showroom mode, the control resets itself and goes through the normal power-up cycle, as if power were interrupted.
 - The unit will also exit Showroom mode by resetting power to the unit.
Note: If any other sensor detects another input signal, Showroom mode will not turn on.

CG GAS COOKTOP

No kit needed. Connect directly to 120 V.

⚠ CAUTION

Use caution when using pliers to avoid damage to wires.

- 1 On the bottom of the unit, remove the access panel using a #2 Phillips head screwdriver.
- 2 Remove the red wire connection from the module.
- 3 Tape the connectors with electrical tape as a precaution.
- 4 Reassemble the unit in reverse order.

CT GAS COOKTOP

No kit needed.

⚠ CAUTION

Use caution when using pliers to avoid damage to wires.

- 1 On the bottom of the unit, remove the access panel using a #2 Phillips head screwdriver.
- 2 Remove the black spark wire connection from the module.



- 3 Tape the connectors with electrical tape as a precaution.
- 4 Assemble the unit in reverse order.

CT INDUCTION COOKTOP

No kit needed. Connect directly to 120 V.

Enter Showroom Mode (Serial #16000000 - #17599999)

- 1 Enter Lock mode by pressing and holding the key symbol for 3 seconds.
- 2 From Lock mode, press and hold Melt for the front element for 5 seconds.
Note: The controls will enter Showroom mode.
 - During Showroom mode, "Shr" will continually appear in the timer display unless Clear, +, or - is pressed. Once there are no key presses for 5 minutes, "Shr" will return.
 - The unit will stay in Showroom mode, even if power is interrupted or disconnected.

Exit Showroom Mode (Serial #16000000 - #17599999)

From Lock mode, press and hold Melt for the front element for 5 seconds.

Note: The controls will exit Showroom mode.

- The controls will go through the startup sequence to indicate that Showroom mode is off.
- If any other sensor detects another input signal while exiting Showroom mode, Showroom mode will not turn off.

Enter Showroom Mode (SWS #17600000)

- 1 Enter Lock mode by pressing and holding the key symbol for 3 seconds.
- 2 From Lock mode, press and hold Off for 5 seconds to enter diagnostics. A beep will sound.
- 3 In diagnostic mode, press and hold Melt for the front element for 5 seconds.
Note: All LEDs will light up for 5 seconds to indicate the unit is in Showroom mode.

Exit Showroom Mode (SWS #17600000)

- 1 From Lock mode, press and hold Off for 5 seconds to enter diagnostics. A beep will sound.

- 2 In diagnostic mode, press and hold Melt for the front element for 5 seconds.
Note: The unit will go through a startup sequence and enter Lock mode.
- 3 Press the key symbol for 3 seconds to unlock the unit.
- 4 The unit will now work as normal.
Note: If these steps do not take the unit out of Showroom mode, reset the unit at the circuit breaker to reset.

DUAL FUEL RANGE

CONTENTS	
1	Cord, showroom power 120 V (part #7016355)
1	Instructions for 30", 36" (part #806144)
1	Instructions for 48", 60" (part #806145)

Kit must be installed to operate the unit in Showroom mode.

Enter Showroom Mode

- 1 In the back of the unit at the terminal, remove the red wire labeled #39 from the module.
- 2 Tape connectors with electrical tape as a precaution.
- 3 Install into a showroom on a 120 VAC designated circuit.

Exit Showroom Mode

Reverse the procedure and install the unit on 240 V.

GAS RANGE

Gas ranges do not have an available Showroom mode.

- For installation into a showroom or display setting, Wolf recommends connecting the unit only to a 120 VAC designated circuit.
- To restore full operation to the unit, connect it to a gas supply.
- When installed into 120 V only, sparking will still occur. If the user attempts to use and leave the griddle and/or oven on, the LED may flash to indicate ignition failure.



Induction Range (continued)

INDUCTION RANGE

CONTENTS	
1	Cord, showroom power 120 V (part #7016355)
1	Instructions for 30", 36" (part #806144)

Kit must be installed to operate the unit in Showroom mode.

Enter Showroom Mode (Oven)

- 1 In the back of the unit at the terminal, remove all red wires from the module.
- 2 Tape connectors labeled #39 and #21 with electrical tape as a precaution.
- 3 Replace red wires labeled N1 and N2 onto empty neutral terminals.
- 4 Install into a showroom on a 120 VAC designated circuit.

Exit Showroom Mode (Oven)

Reverse the procedure and install the unit on 240 V.

Enter Showroom Mode (Cooktop)

- 1 Make sure the cooktop is locked and the lock LED is lit. If it is not, touch and hold Lock for three seconds.
- 2 Press and hold timer + and - for 5 seconds until the controls flash once and the cooktop enters diagnostic mode. Release the keys immediately after the controls flash, or the cooktop will exit diagnostic mode.
- 3 Press time + six times.
Note: SIM and HI for the front control zone and seven back control zone LEDs will illuminate, indicating that Showroom mode is available for selection.
- 4 Press HI to turn Showroom mode on.
Note: SH will appear in the timer display once Showroom mode has been turned on.
- 5 Press All Off to exit diagnostic mode.
Note: The cooktop will work as normal with no power supplied to cooking zones, and SH will appear in the timer unless the timer is turned on. The unit will stay in Showroom mode, even if power has been interrupted.

Exit Showroom Mode (Cooktop)

- 1 Make sure the cooktop is locked and the lock LED is lit. If it is not, touch and hold Lock for three seconds.

- 2 Press and hold timer + and - for five seconds until the controls flash once and the cooktop enters diagnostic mode. Release the keys immediately after the controls flash, or the cooktop will exit diagnostic mode.
- 3 Press time + six times. The SIM and HI icons for the front control zone and the seven back left control zone LEDs will illuminate, indicating Showroom mode is available for selection.
- 4 Press SIM to turn off Showroom mode.
- 5 Touch All Off to exist diagnostic mode.

SEALED BURNER RANGETOPS

Sealed Burner Rangetops do not have an available Showroom mode.

It is recommended that when installing into a showroom or display setting, to refrain from connecting the unit to a gas and electrical supply.

STEAMER MODULE, FRYER MODULE, GRILL MODULE, TEPPANYAKI MODULE

No kit needed.

Enter Showroom Mode

Showroom mode is accessible when the input voltage and frequency is between 110-227 V and 47-63 Hz.

- 1 Touch and hold Lock for 5 seconds to enter Lock mode.
- 2 In Lock mode, touch and hold All Off for 5 seconds.
- 3 Touch timer + or - until six dots appear on the rear display zone.
- 4 Touch HI for the front control zone to turn on Showroom mode.
Note: SH will appear on the display when Showroom mode is turned on.
Note: An interruption of power will not disengage Showroom mode. The module will restart in Showroom mode when power is restored.

Exit Showroom Mode

- 1 Touch and hold Lock for 5 seconds to enter Lock mode.
- 2 In Lock mode, touch and hold All Off for 5 seconds.
- 3 Touch timer + or - until six dots appear on the rear display zone.



Steamer Module, Fryer Module, Grill Module, Teppanyaki Module (continued)

- 4 Touch LO/SIM for the front control zone to exit Showroom mode.

ELECTRIC FRYER MODULE, ELECTRIC GRILL MODULE, ELECTRIC STEAMER MODULE (EARLIER VERSIONS)

Earlier generation modules do not have Showroom mode.

Controls will work for a short time with each use on 120 V, then an error code appears.

MULTIFUNCTION MODULE

⚠ CAUTION

Use caution when using pliers to avoid damage to wires.

- 1 On the bottom of the unit, remove the access panel using a #2 Phillips bit.
- 2 Remove the connector from the spark module.
- 3 Tape the connector with electrical tape as a precaution.
- 4 Assemble the unit.

ELECTRIC MODULE COOKTOP, GAS MODULE COOKTOP, INDUCTION MODULE COOKTOP

Follow the instructions for the corresponding full-size cooktops to access Showroom mode.



DISHWASHER

While in Showroom mode, the Cove connect feature works to monitor and control the product using the Sub-Zero Group Owner's App.

Enter Showroom Mode

- 1 Touch Cancel twice.
- 2 Touch and hold Options until "User Set Up" appears on the display.
- 3 Touch Options to scroll through user settings until "Showroom Mode" appears. The display will read "Showroom Mode Off."
- 4 Touch Enter. The display will read "Showroom Mode On."
- 5 Touch Cancel to exit the settings.

Exit Showroom Mode

- 1 Touch Cancel twice.
- 2 Touch and hold Options until "User Set Up" appears on the display.
- 3 Touch Options to scroll through user settings until "Showroom Mode" appears. The display will read "Showroom Mode On."
- 4 Touch Enter. The display will read "Showroom Mode Off."
- 5 Touch Cancel to exit the settings.

